



# Užívateľské nastavenie TP-Link Archer C 80

## AC1900 Bezdrôtový MU-MIMO Wi-Fi router

1. Vo webovom prehliadači choďte na : 192.168.0.1

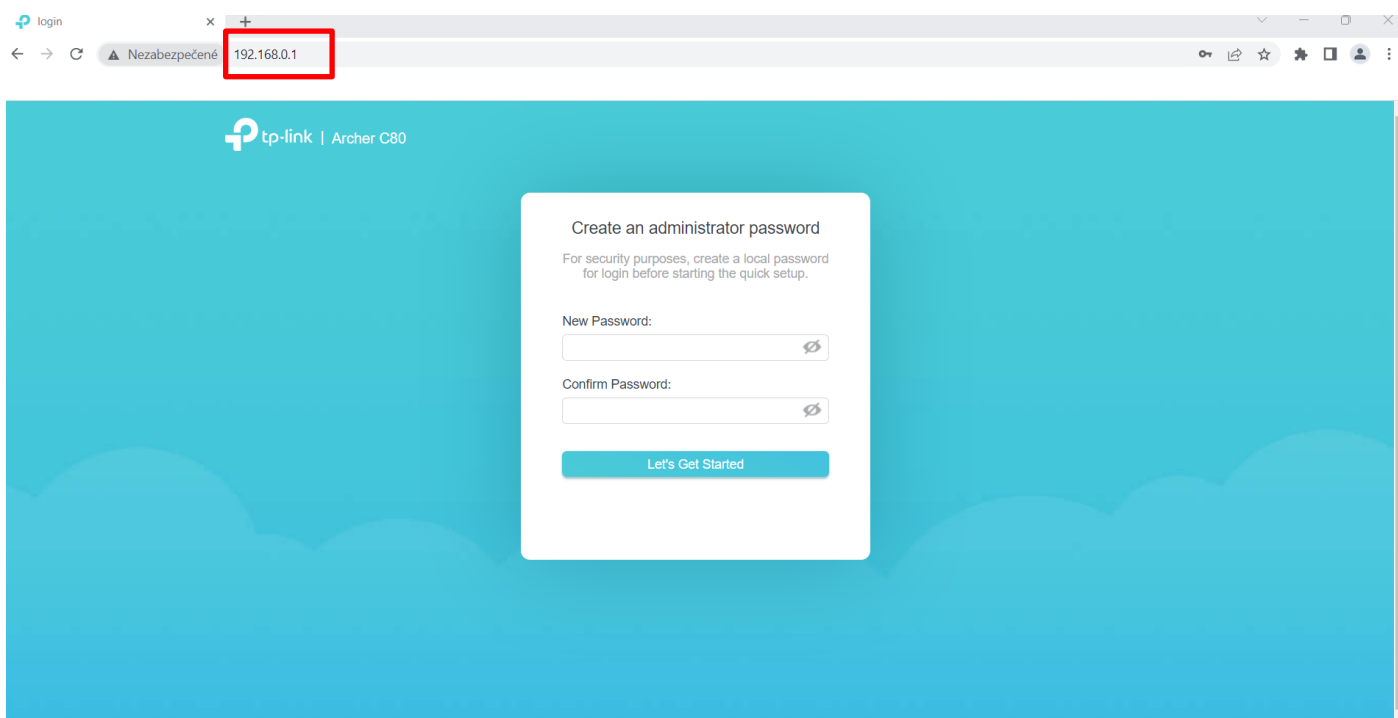

2. Zadajte nové heslo pre prístup do wifi routera

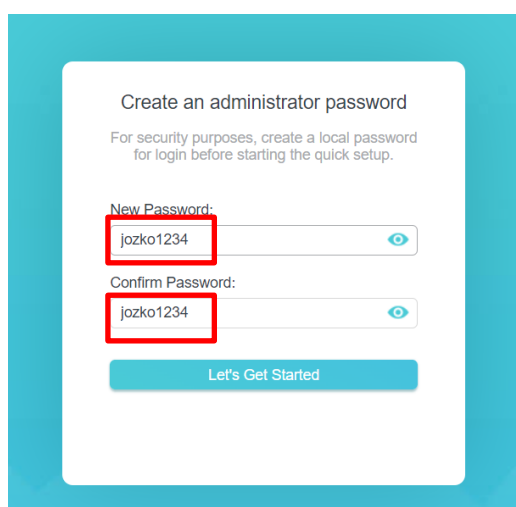

3. Nastavte časovú zónu. Pre ďalší krok stlačte **NEXT**.

4. Nastavte pridelenie IP pre WAN port. Použite **Dynamic IP**. Pre ďalší krok stlačte **NEXT**

5. Nastavte WIFI (2,4GHz, 5GHz). Pokiaľ nepotrebujete špeciálne nastavenie odporúča sa použiť ponúknuté. Pre ďalší krok stlačte **NEXT**.

#### Success!

Settings applied successfully. You can connect your devices to the router by using the information below.

6. Upgrade na nový FW. Pokiaľ sa vám zobrazí nasledujúce okno, doporučujeme kliknúť na **Set Auto Update Now(Recommended)** aby sa upgrade vykonávali automaticky. Pre ďalší krok stlačte **NEXT**.



#### Keep your router updated.

Auto update allows your router to automatically update to the latest firmware which provides better network performance.

**Set Auto Update Now(Recommended)**

Skip

#### When do you want to update your router?

03:00 - 05:00

#### Note:

1. Auto Update will set the router's system time to "Get from Internet".
2. If the router detects anyone is using the internet at the time, the update will be rescheduled.

BACK

NEXT

7. Ukončenie rýchleho nastavenia. Stlačte **SKIP**. V prípade, že už máte konto na TP-Link Cloud a chcete mať zaregistrované aj to zariadenia vyplňte prihlasovacie údaje a stlačte **Log In**.



#### Get TP-Link Cloud Service

Log in to bind the router to your TP-Link ID. You can manage your network remotely via the Tether app, get notified of the latest firmware updates and more.

TP-Link ID (Email):

Password:

Log In

Sign Up


Forgot Password?

SKIP


Save the QR code and print it out, then your family and friends can scan this QR code to connect to your Wi-Fi easily.

Tip: Apple devices with iOS 11 and above can use Camera to scan.



	SSID: TP-Link_732C Password: 48185721
	SSID: TP-Link_732C_5G Password: 48185721

8. Upgrade na nový FW . Stlačte **Advanced** (Prípadne  v pravom hornom rohu). V ľavom menu **System / Firmware Upgrade**. Ak je rozdiel medzi **Firmware Version** a **Latest Firmware Version** stlačte **UPGRADE** .


Pokiaľ sú verzie zhodné, pokračujte na ďalší krok 7.

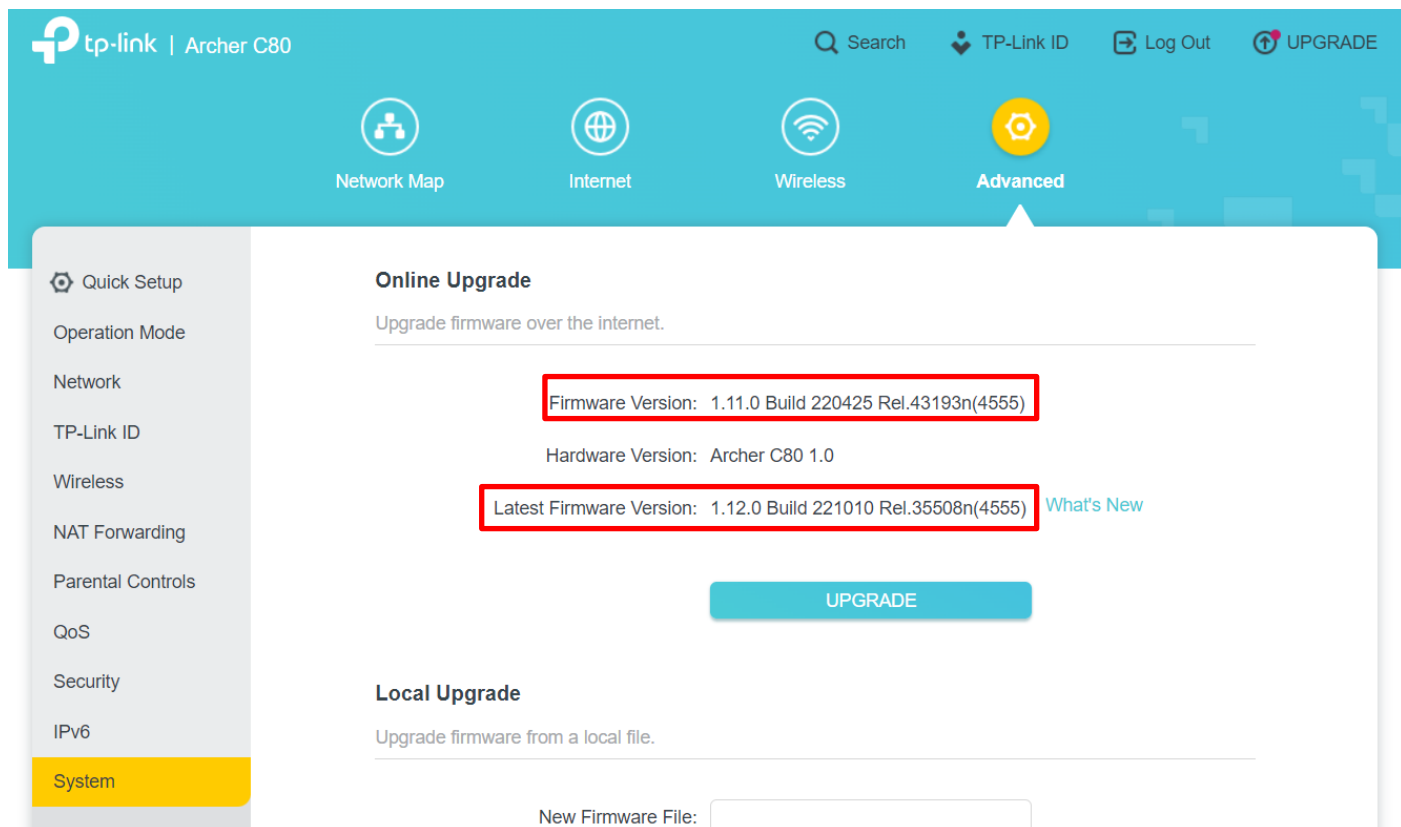


Počkajte pokiaľ prejde celý upgrade. Router sa raz reštartne.

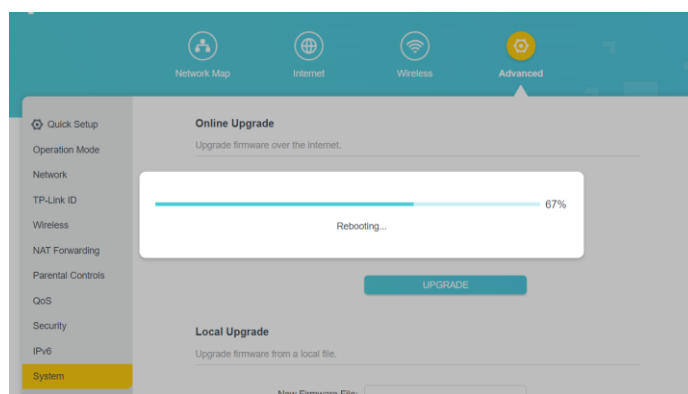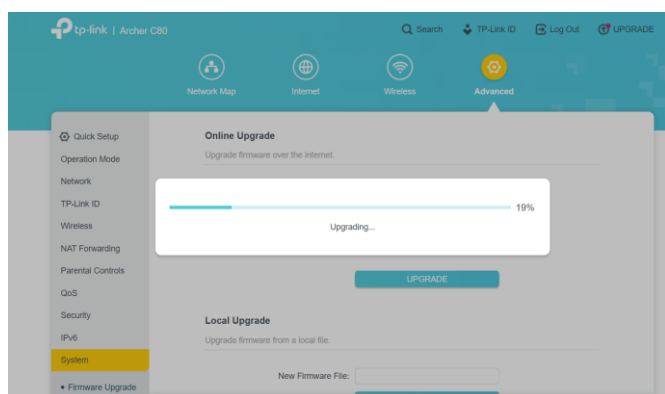


Príhláste sa opäť cez webový prehliadač s Vami zadaným heslo z 1. kroku a pokračujte na ďalší krok 9.

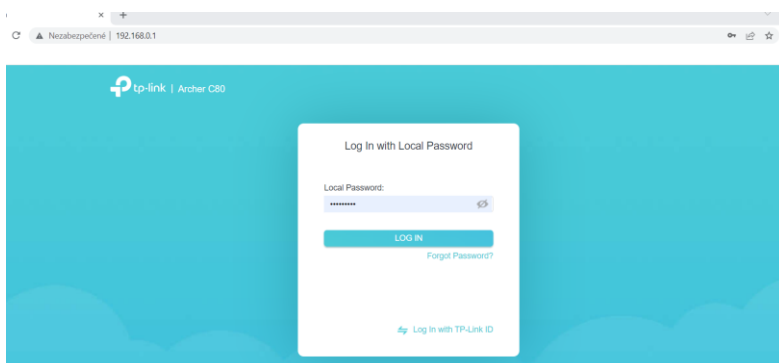

9. Nastavenie WIFI. Stlačte **Advanced**. V ľavom menu **Wireless/Wireless Settings**. Zmeníte nastavenie **Channel Width** na **40Mhz** pre pasmo 2.4GHz a **Channel Width** na **80Mhz** pre pasmo 5GHz. Aby sa uložili zmeny stlačte **SAVE**

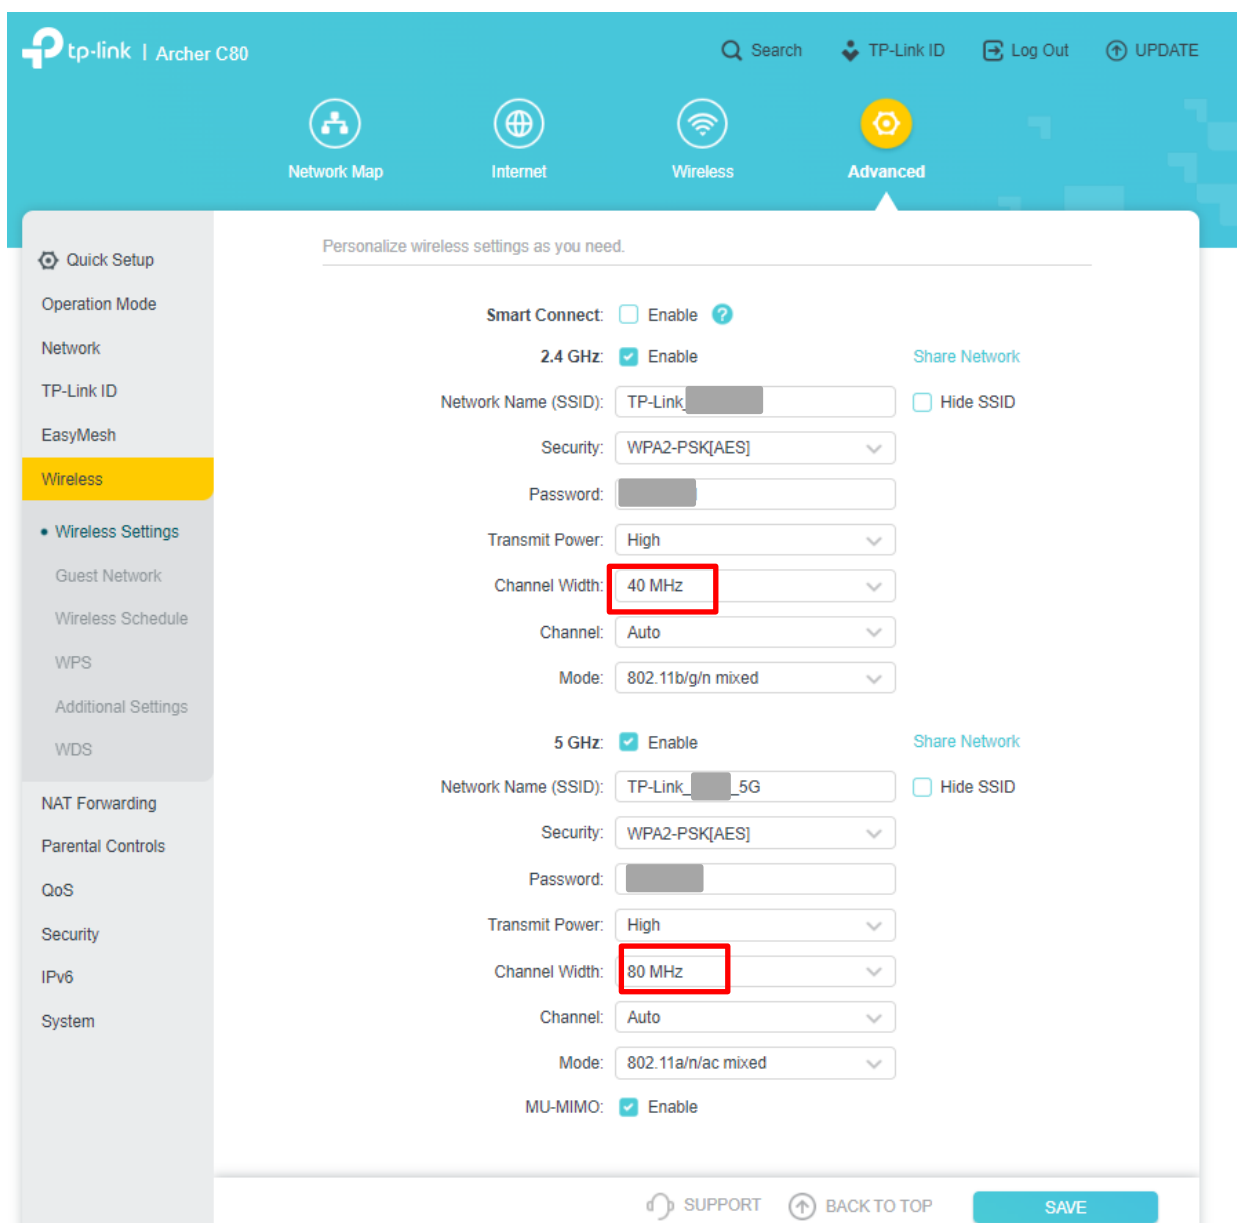

10. Nastavenie automatického upgradovanie FW. Stlačte **Advanced**. V ľavom menu **System/Firmware Update**. Zmeníte nastavenie pre **Auto Update** na ON podľa obrázku.

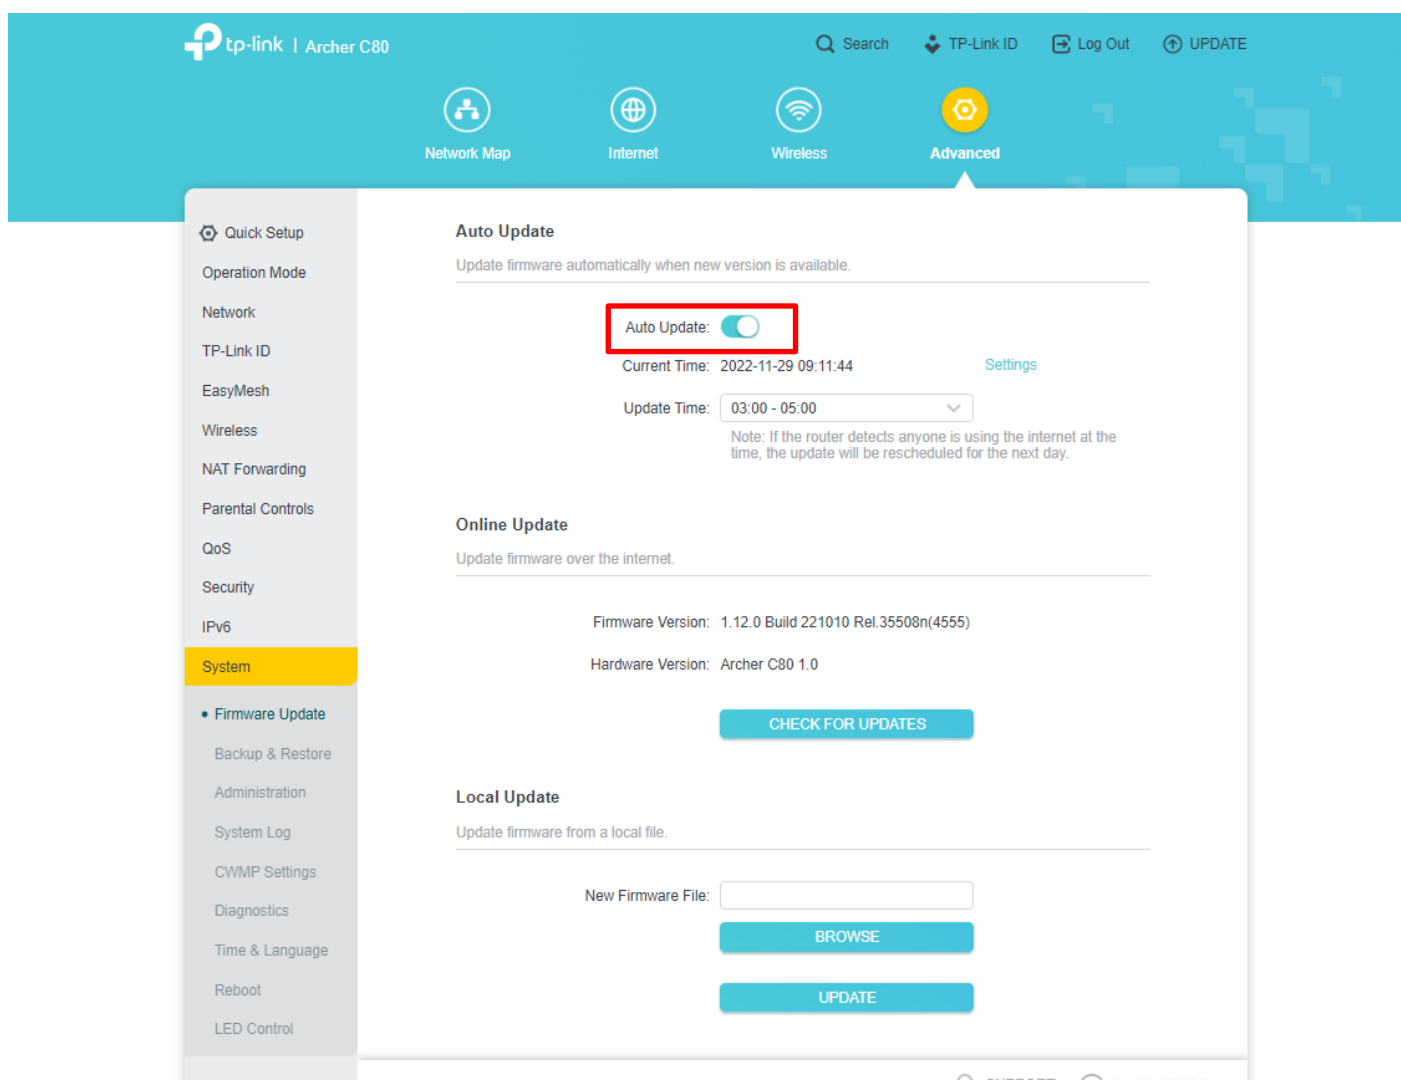

The screenshot shows the TP-Link Archer C80 web interface. The top navigation bar includes 'tp-link | Archer C80', a search bar, 'TP-Link ID', 'Log Out', and 'UPDATE'. The main menu has icons for 'Network Map', 'Internet', 'Wireless', and 'Advanced'. The 'Advanced' menu is selected, and a sidebar on the left shows 'System' and 'Firmware Update' highlighted. The 'Auto Update' section is active, showing a toggle switch turned on (indicated by a red box in the original image). Below the toggle, it shows 'Current Time: 2022-11-29 09:11:44' and 'Update Time: 03:00 - 05:00'. A note states: 'Note: If the router detects anyone is using the internet at the time, the update will be rescheduled for the next day.' The 'Online Update' section shows 'Firmware Version: 1.12.0 Build 221010 Rel.35508n(4555)' and 'Hardware Version: Archer C80 1.0' with a 'CHECK FOR UPDATES' button. The 'Local Update' section has a 'New Firmware File:' input field, a 'BROWSE' button, and an 'UPDATE' button.

# Wifi router je správne nastavený a môžete ho používať...